
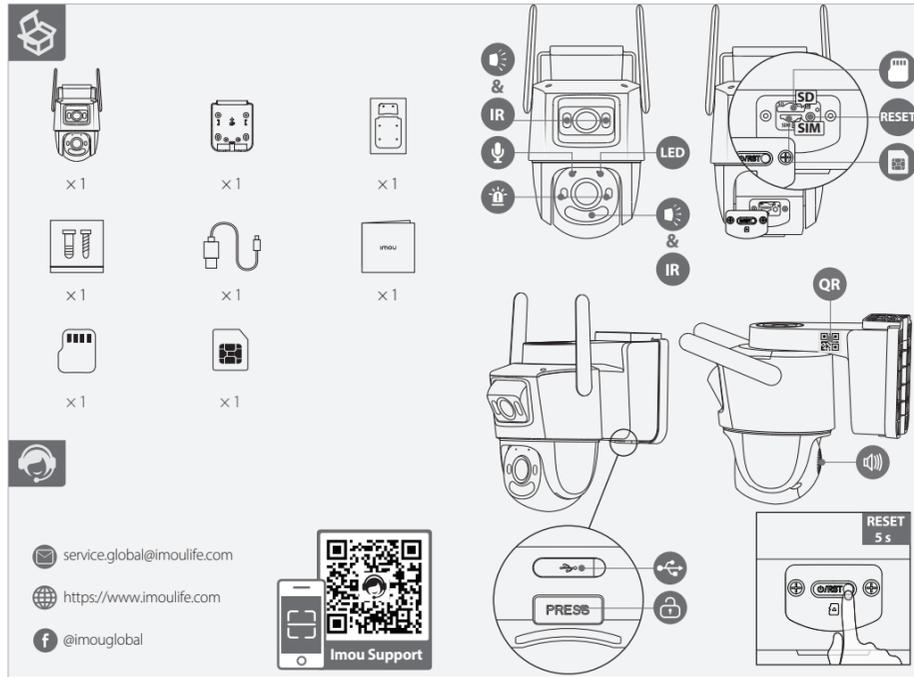


Imou

Quick Start Guide

V1.0.0

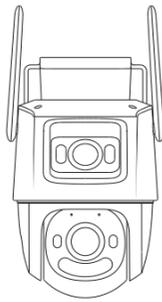

service.global@imoulife.com


https://www.imoulife.com

@imouglobal



TZ.U0049293


1 Power On the Camera

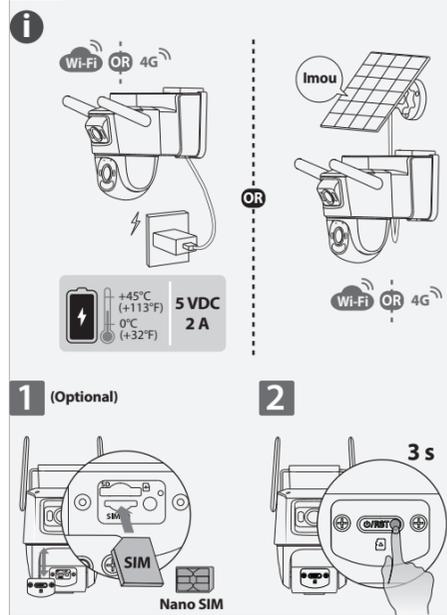





2 Get the Imou Life App



3 Set Up the Camera

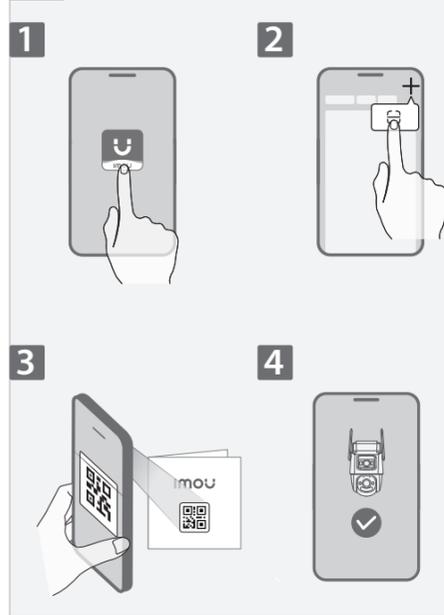

4 Install the Camera

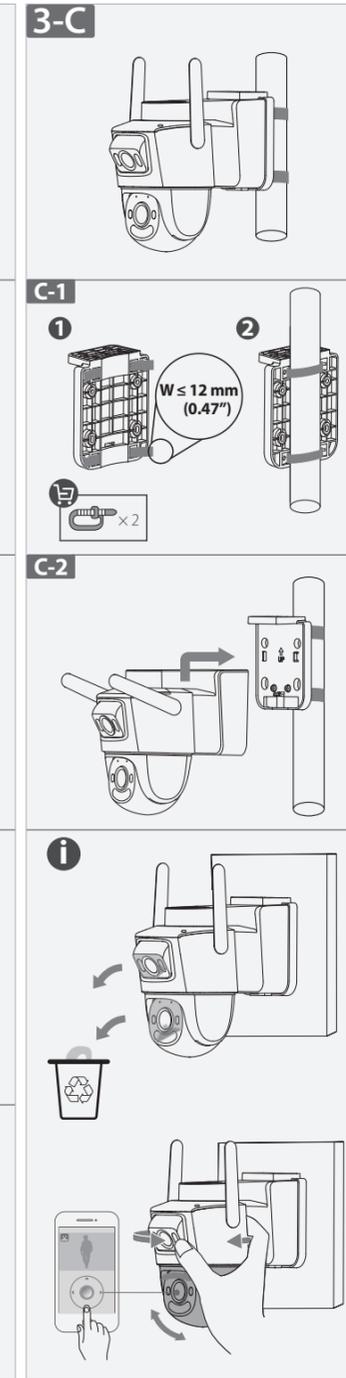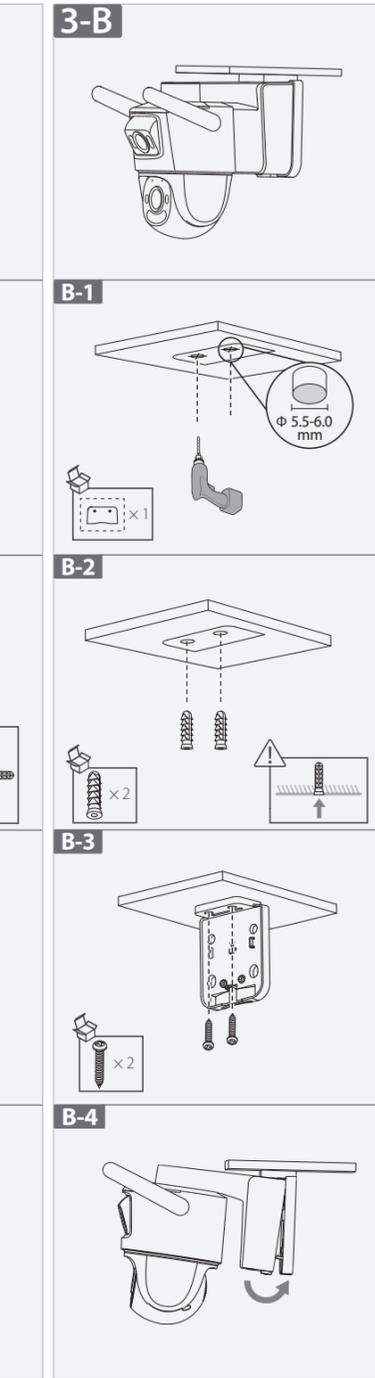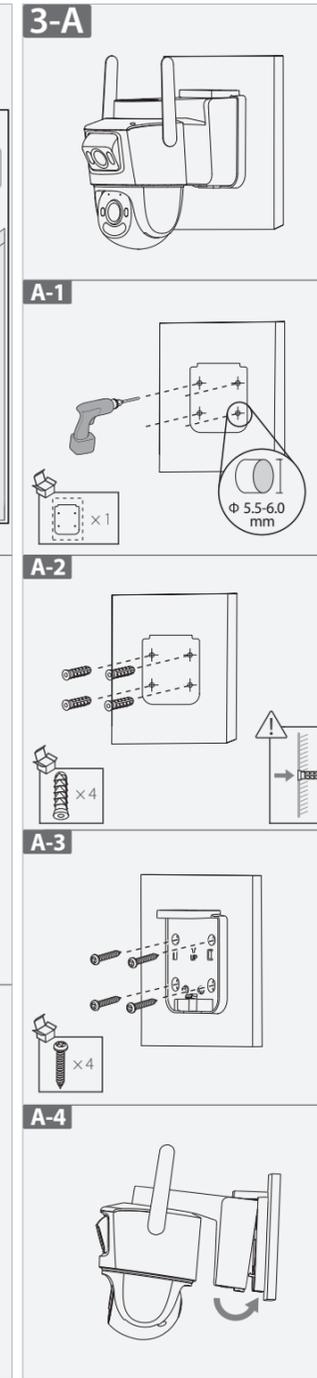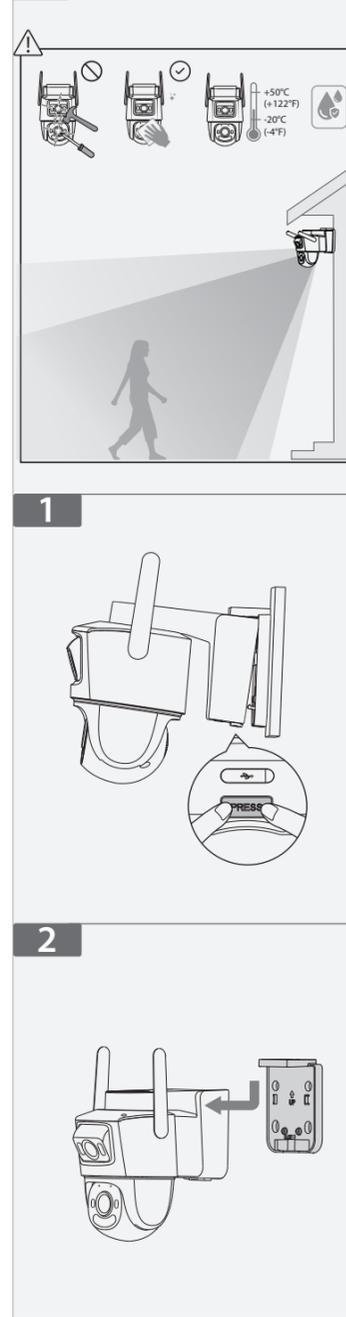

English

- 1 Power On the Camera (Part 1)**
Your camera supports 4G connectivity and Wi-Fi connectivity. If you decide to use the cellular network, insert the Nano SIM card into the slot before powering on the camera. To turn on the camera, press and hold the Power button for 3s. If the indicator light flashes red and then turns off, the camera is out of battery. Please charge it with a 5 VDC 2A power adapter or a solar panel.
- 2 Get the Imou Life App (Part 2)**
Scan the QR code on part 2 or search for "Imou Life" to download and install the app. Create an account and log in.
- 3 Set Up the Camera (Part 3)**
Scan the QR code on the body of the device or on the cover of this guide with the app, and then follow on-screen instructions to complete the setup (see part 3).
- 4 Install the Camera (Part 4)**
Make sure the mounting surface is strong enough to hold three times the weight of the camera. For detailed installation process, please see part 4.

LED Status		Device Status	
LED	Green	Flashing slowly	Wi-Fi Ready to set up the device 4G: No SIM card installed
		Flashing fast	Wi-Fi: Connecting to the router 4G: Connecting to 4G network
	Solid	Booting Network connected successfully	
Red & Green	Alternating	Updating firmware	
	Blue	Flashing slowly	Charging
Solid		Fully charged	

i If you need to reset the camera, press and hold the reset button for 5 s. Release the button until you hear a beep.

